




TOR HOUT SS)



ATTENTION


This instruction sheet gives complete information for setting up all special track sections which are standard equipment in Strombecker road racing sets. Your set may include one or more of these special track sections. Follow the set-up instructions carefully. The special track which is included in your set will be indicated by illustration number on the track layout for your particular set. All of these special track sections are available separately at your local dealer by the stock number shown. For additional accessories and racing cars see your road racing guide book.

Be sure to read your road racing guide book, especially the "Important Tips" section, in order to obtain the greatest enjoyment from this fine road racing set.

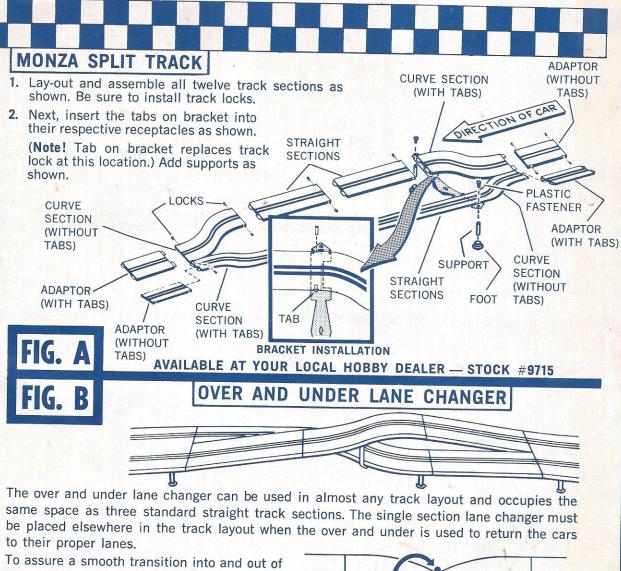

the over and under, pylons must be placed under the track sections at each end of the over and under as shown in the basic track layout.

The metal support brackets are inserted between the two crossover pieces as shown, and must be in place before the lane changer is used.

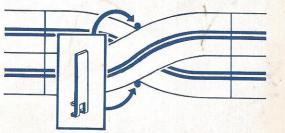

AVAILABLE AT YOUR LOCAL HOBBY DEALER - STOCK #9220

MECHANICAL LAP COUNTER Note that there is an arrow molded into the track to indicate the direction the cars must

G.

travel.

Set the lap counter dial to zero by turning the knob counter clockwise until the pointer reaches the zero mark. Do not attempt to turn the knob clockwise or you may jam the operating mechanism.

FIG. LENGTHS OF STRAIGHT TRACK ONE STRAIGHT SECTION HILL CLIMB HILL CLIMB SECTION HILL SECTION **CLIMB** TRACK LOCKS 4-6" SUPPORTS Available At Your Local Hobby Dealer — Stock #9255 The spring wire actuator is shaped so that it **Available At** will pass smoothly over the slot and snap back Your Local without getting caught in the slot or on the car. **Hobby Dealer** Make sure that this spring does not get bent out of shape due to mishandling. Stock #9725

EQUIVALENT TO THREE

